

Part Number	ESM Order Ref.	Illus. No.	Description	Remarks
Distributor - 803cc, 948cc, 1098cc				
DST101	DST101	1	Distributor assembly - DM2 - 948cc	
DST102	DST102	2	Cap - distributor - side entry	
DST103	DST103	3	Brush and spring	
DST104	DST104	4	Arm - rotor	
DST105	DST105	5	Contact points set - 25D4	
-	SS106	5	Contact points set (DM2) (1953-1956)	
-	SS106A	5	Contact points set (DM2) (1956-1961)	
-	SV112	5	Contact points set (DKY4) (Side valve engine)	
DST106	DST106	6	Condenser	
DST107A	DST107A	7	LT lead - DM2 (screw)	
DST107	DST107	-	LT lead - 25D4	
DST108	DST108	8	Cap - distributor - top entry	
DST109	DST110A	9	Vacuum unit - screw on pipe type	
DST110	DST110	10	Vacuum unit - push on pipe type	
DST111	DST111	11	Distributor assembly - 25D4 - 1098cc	
GHT105	DST113	-	Distributor HT leads (set 5) - push in type	
GHT102	DST115	-	Distributor HT leads (set 5) - screw in type	
-	DST113A	-	Distributor HT lead (wire core) - per foot	
-	DST116	-	Distributor HT lead brass contact washer	
-	DST114	-	Contact set fixing screw	
-	1G2673	-	Spacer - HT cables	

