

Part Number	ESM Order Ref.	Illus. No.	Description	Remarks
-------------	----------------	------------	-------------	---------

Coil and vacuum advance

VAC101	VAC101	1	Pipe assembly - ignition control - metal	
-	VAC101E	-	Pipe assembly - ignition control - plastic (with Rubber connectors)	
VAC103	VAC103	2	Coil assembly - late type push in HT lead	
-	VAC103L		Coil assembly - late type push in HT lead - Lucas	
-	VAC104	2	Coil assembly - early type screw in HT lead	
-	VAC110	-	Acorn nut for coil	
VAC105	VAC105SH	4	Clip - fuel trap mount	
VAC106	VAC102A	5	Connection - vacuum pipe - straight	
-	VAC102B		Connection - vacuum pipe - angled	
VAC107	VAC107	6	Plate - steady	
VAC108	VAC108	7	Bracket - dynamo - coil mounting	

