

Part Number	ESM Order Ref.	Illus. No.	Description	Remarks
<b>Alternator</b>				
ALT100	ALT100	-	Alternator conversion kit	
ALT101	ALT100B	1	Alternator - positive earth (as fitted to police cars etc)	
ALT102	ALT102/3	2	Fan	
ALT103	ALT102/3	3	Pulley	
ALT104	ALT104	4	Mounting bracket - rear (fixes to engine block)	
ALT105	ALT105	5	Link - adjusting	
ALT106	FIX123	6	Pillar - adjusting	
ALT107	ALT107SH	7	Bracket assembly - drive end	
ALT108	ALT108SH	8	Bolt - through fixing	
ALT109	ALT109SH	9	Bearing	
ALT110	ALT110SH	10	O' - ring	
ALT111	ALT111SH	11	Plate - bearing retaining	
ALT112	ALT112SH	12	Circlip	
ALT113	ALT113SH	13	Rotor	
ALT114	ALT114SH	14	Brush and spring	
ALT115	ALT115SH	15	Brush box	
ALT116	ALT116SH	16	Stator	
ALT117	ALT117SH	17	Heat-sink ( with cathode base diodes )	
ALT118	ALT118SH	18	Heat-sink ( with anode base diodes )	
ALT119	ALT119SH	19	Bearing - needle roller	
ALT120	ALT120SH	20	Bracket assembly - slip ring end	
ALT121	ALT121	-	Wiring harness for alternator	

