

| Part Number                       | ESM Order Ref. | Illus. No. | Description                                 | Remarks |
|-----------------------------------|----------------|------------|---|---------|
| <b>Repair panels - all models</b> |                |            |   |         |
| CHS701                            | RP108CR        | 1          | Quarter panel - outer - front - R/H         |         |
| CHS702                            | RP108CL        | -          | Quarter panel - outer - front - L/H         |         |
| CHS703                            | RP108DR        | 2          | Quarter panel - outer - rear - R/H          |         |
| CHS704                            | RP108DL        | -          | Quarter panel - outer - rear - L/H          |         |
| CHS705                            | RP134R         | 3          | Quarter panel - inner - front - R/H         |         |
| CHS706                            | RP134L         | -          | Quarter panel - inner - front - L/H         |         |
| CHS707                            | RP135R         | 4          | Quarter panel - inner - rear - R/H          |         |
| CHS708                            | RP135L         | -          | Quarter panel - inner - rear - L/H          |         |
| CHS940                            | RP114R         | -          | Chassis leg repair - R/H                    |         |
| CHS941                            | RP114L         | 5          | Chassis leg repair - L/H                    |         |
| CHS710                            | RP124AR        | -          | Flitch and hinge pillar repair - R/H        |         |
| CHS711                            | RP124AL        | 6          | Flitch and hinge pillar repair - L/H        |         |
| CHS712                            | RP102BR        | 7          | Floor pan - front - R/H                     |         |
| CHS712/4                          | RP102AR        | -          | Half floor pan - R/H                        |         |
| CHS713                            | RP102BL        | -          | Floor pan - front - L/H                     |         |
| CHS713/5                          | RP102AL        | -          | Half floor pan - L/H                        |         |
| CHS714                            | RP102CR        | 8          | Floor pan - rear - R/H                      |         |
| CHS715                            | RP102CL        | -          | Floor pan - rear - L/H                      |         |
| CHS716                            | RP138R         | 9          | Rear spring hanger - R/H                    |         |
| CHS717                            | RP138L         | -          | Rear spring hanger - L/H                    |         |
| CHS718                            | RP104          | 10         | Crossmember end                             |         |
| CHS719                            | RP106R         | 11         | Front spring hanger bracket (on plate)      |         |
| CHS720                            | RP106L         | -          | Front spring hanger bracket (on plate)      |         |
| CHS732                            | RP108R         | -          | Sill - outer - 2dr saloon/convertible - R/H |         |
| CHS733                            | RP108L         | -          | Sill - outer - 2dr saloon/convertible - L/H |         |
| CHS734                            | RP108AR        | 12         | Sill - outer - 4dr saloon - R/H             |         |
| CHS735                            | RP108AL        | -          | Sill - outer - 4dr saloon - L/H             |         |
| CHS744                            | RP108BR        | -          | Sill - outer - Traveller - R/H              |         |
| CHS745                            | RP108BL        | -          | Sill - outer - Traveller - L/H              |         |

