



Part Number	ESM Order Ref.	Illus. No.	Description	Remarks
			Switches, regulator, fusebox, etc.	
-	SWH100	-	Regulator fuse box (early MM) Lucas RF95	
SWH101	SWH101	1	Regulator box assembly - screw terminals	
SWH102	SWH102	2	Regulator box assembly - Lucar connectors	
SWH103	SWH103	3	Fusebox assembly - screw terminals	
SWH104	SWH104	4	Fusebox assembly - Lucar connectors	
SWH105	SWH105	5	Cover	
SWH106	SWH106	6	Switch - starter	
SWH107	SWH107	7	Coupling - starter switch control	
SWH108	SWH108	8	Switch - starter solenoid	
SWH108A	SWH108A	9	Switch - starter solenoid - round	
SWH109	SWH109	10	Cap - terminal insulating	
-	SWH110	-	Ignition warning light - MM and early 803cc	
SWH113	SWH113	14	Fuse - 35 amp	
-	SWH113A	14	Fuse - 10 amp	
SWH114	SWH114	15	Switch - ignition (less barrel and keys)	
SWH115	SWH115	16	Switch - ignition - starter (less barrel and keys)	
SWH117	KEY109	18	Barrel and keys - ignition switch	
SWH118	SWH118	19	Control assembly - starter - brown knob	
SWH119	SWH119	19	Control assembly - starter - black knob	
SWH120	SWH120	20	Switch - windscreen wiper	
SWH121	SWH120	20	Switch - windscreen wiper	
SWH122	SWH123	21	Switch - lighting	
SWH123	SWH122	21	Switch - lighting	
SWH124	SWH124	22	Switch - windscreen wiper	
SWH125	SWH125	23	Switch - lighting	
SWH126	SWH126SH	24	Packing - dipper switch	
SWH127	SWH127	25	Switch - dipper - late - push on connectors	
-	SWH128	25	Switch - dipper - early - screw connectors	