



Part Number	ESM Order Ref.	Illus. No.	Description	Remarks
Connecting rods - bearings				
10M124	10M124	1	Rod - connecting - nos. 1 & 3 cylinders	
10M125	10M125	2	Rod - connecting - nos. 2 & 4 cylinders	
10M126	10M126	3	Screw	
10M127	10M127	4	Washer - lock	
Bearing - big end				
10M128/S	10M128S	8	Standard	
10M128/10	10M128/10	8	.010" (.254 mm) U/S	
10M128/20	10M128/20	8	.020" (.508 mm) U/S	
10M128/30	10M128/30	8	.030" (.762 mm) U/S	
10M128/40	10M128/40	8	.040" (1.016 mm) U/S	
10M128/60	10M128/60	8	.060" (?) U/S	
10M129	10M129	9	Crankshaft	
10M130	10M130SH	10	Restrictor - oil	
10M131	10M131	11	Bush - 1st motion shaft	
Bearing - main				
10M132/S	10M132S	12	Standard	
10M132/10	10M132/10	12	.010" (.254 mm) U/S	
10M132/20	10M132/20	12	.020" (.508 mm) U/S	
10M132/30	10M132/30	12	.030" (.762 mm) U/S	
10M132/40	10M132/40	12	.040" (1.016 mm) U/S	
Washer - thrust				
10M133/S	10M133S	13	Thrust washer set - standard	
10M133/03	10M133/3	13	Thrust washer set - .003" (.076 mm) O/S	
10M135	10M135	15	Gear - crankshaft	
10M136	10M136	16	Key	
10M137	10M137	17	Washer - packing - crankshaft gear	
10M138	10M138	18	Camshaft	
10M139	10M139SH	19	Pin - oil pump driving	
10M140	10M140	20	Plate - camshaft locating	
10M141	FIX136	21	Screw - 1/4 UNF x 3/4"	
10M142	10M142	22	Washer - shakeproof - 1/4"	
10M143	10M143	23	Gear - camshaft	
10M144	10M144	24	Ring - tensioner - pair	
10M145	9G227	25	Woodruff - 5/8"D x 5/32"	
10M146	10M138A	26	Washer - lock	
10M147	10M585	27	Nut	
10M148	10M148	28	Chain - timing	
10M149	10M149	29	Plate - engine mounting - front	
10M150	10M150	30	Gasket - plate to crankcase	
10M151	FIX138	31	Screw - plate to crankcase - 5/16" UNF	
10M152	FIX157	32	Washer - spring - 5/16"	
10M153	10M153	33	Screw - plate to bearing cap	
10M154	10M154	34	Plate - locking	
10M155	10M155SH	35	Flywheel	
10M156	10M156	36	Gear - ring - starter	
10M157	10M157	37	Dowel	
10M158	FIX104	38	Screw - Flywheel to crankshaft	
10M159	10M159	39	Washer - lock	
10M160	10M160	40	Tappet (cam follower) - standard	
10M161	10M161	41	Push rod	
10M162	10M162	42	Pulley - crankshaft	
10M163	FIX124	43	Nut - starting handle	
10M164	10M164	44	Washer - lock	
10M165	10M165SH	45	Distributor housing	
10M166	FIX136	46	Screw - 1/4" UNF x 3/4"	
10M167	10M142	47	Washer - shakeproof - 1/4"	
10M168	10M168	48	Spindle - distributor drive	