



Part Number	ESM Order Ref.	Illus. No.	Description	Remarks
10M169	10M169	1	Head - cylinder (with guides and plugs)	
10M169G	10M401L	1	Head - cylinder - reconditioned - lead free	
10M170	10M170	2	Guide - inlet	
10M170	10M170	2	Guide - exhaust	
10M171	10M171	3	Plug - oil hole	
10M172	FIX113	4	Stud - water outlet elbow - 5/16" UNC/ 5/16" UNF	
10M173	FIX114	5	Stud - rocker bracket - long - 3 1/8"	
10M174	FIX115	6	Stud - rocker bracket - short - 2 5/8"	
10M175	FIX112	7	Stud - inlet and exhaust manifold	
10M176	FIX116	8	Stud - heater control tap	
10M177	10M177	9	Plate - cover - heater control tap	
10M178	HTR104	10	Gasket	
10M179	FIX156	11	Washer - spring - 1/4"	
10M180	FIX137	12	Nut - 1/4" UNF	
10M181	10M181	14	Valve - inlet	
10M182	10M182	15	Valve - exhaust	
10M182A	10M182A	15	Valve - exhaust - hardened for unleaded	
10M183	10M183	16	Spring - valve	
10M184	10M184	17	Cup - Valve spring	
10M185	10M185	18	Shroud - valve guide	
10M186	10M186	19	Valve stem seal - "O" ring type	
10M186A	10M186A	19	Valve stem seal - spring type	
10M187	10M187	20	Cotter - valve (collet) - pair	
10M188	10M188	21	Circlip	
10M189	10M189	22	Shaft assembly - rocker	
10M190	10M190	23	Shaft	
10M191	10M191SH	24	Plug - plain	
10M192	10M192SH	25	Plug - screwed	
10M193	10M193	26	Bracket - rocker shaft (tapped)	
10M194	10M194	27	Bracket - rocker shaft (plain)	
10M195	10M197	28	Rocker - valve	
10M196	10M196	29	Bush	
10M197	10M197	30	Rocker - valve - bushed (pressed steel)	
10M198	10M198	31	Screw - tappet adjusting	
10M199	10M199	32	Nut - lock	
10M200	10M200	33	Spring - spacing	
10M201	10M201	34	Screw - locating	
10M202	10M202SH	35	Plate - locating	
10M203	10M203	36	Plate - locking	
10M204	10M204	37	Washer - double coil	
10M205	10M205	38	Washer - plain	
10M206	FIX157	39	Washer - spring - rocker bracket stud	
10M207	FIX139	40	Nut	
10M208	10M208A	41	Gasket - cylinder head	
10M209	10M209	42	Washer - cylinder head stud	
10M210	FIX109	43	Nut - cylinder head stud	