



Part Number	ESM Order Ref.	Illus. No.	Description	Remarks
Oil filter - Tecalemit				
10M256	10M256	1	Element	
10M257	10M257SH	2	Head	
10M258	10M258	3	Sump	
10M259	10M259	4	Seal - sump to head	
10M260	10M260SH	5	Plate - clamping	
10M261	10M261SH	6	Circlip	
10M262	10M262SH	7	Washer (felt)	
10M263	10M263SH	8	Washer - dished	
10M264	10M264	9	Plate - pressure	
10M265	10M265	10	Circlip	
10M266	10M266	11	Washer (felt)	
10M267	10M267	12	Washer - plain	
10M268	10M268SH	13	Spring - pressure plate	
10M269	10M269SH	14	Bolt - centre	
10M270	10M270	15	Seal - bolt to sump	
Oil filter - Purolator				
10M256	10M256	1	Element	
10M271	10M271SH	16	Head	
10M272	10M272SH	18	Sump	
10M273	10M273	19	Seal - sump to head	
10M274	10M274	20	Plate - pressure	
10M275	10M275	21	Seal	
10M276	FIX109A	22	Washer - plain	
10M277	10M277	23	Spring - pressure plate	
10M278	10M278	24	Bolt	
10M279	10M279	25	Collar	
10M280	10M280	26	Seal	
Oil Filter (with pressure switch)				
10M281	10M281SH	27	Head - with switch	
10M282	10M282SH	28	Sump	
10M283	FIX109A	29	Washer - plain	
10M284	10M275	30	Seal	
10M285	10M285	31	Gasket - filter to crankcase	
10M286	FIX158	32	Washer - spring	
10M287	FIX140	33	Nut - filter stud	
10M288	10M288	34	Pipe - oil	
10M289	10M289	35	Screw - banjo union	
10M290	10M290	36	Washer - copper	
10M291	10M291	37	Connection - flared	
10M292	10M292	38	Switch - oil pressure	
10M293	10M245	39	Washer - copper	